


PR411

Pre-Rinse Unit, Deck Mounted

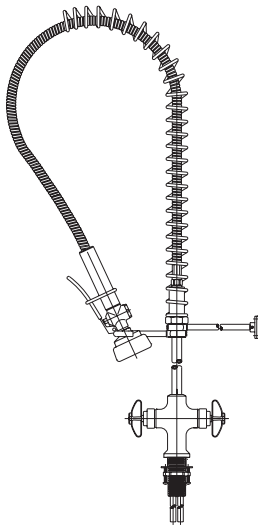

Application: Deck mounted pre-rinse unit for hot and cold water.

Body: Forged brass.

Valve Units: WaterSaver self-contained compression valve units with replaceable stainless steel seats and integral check valves. Check valves prevent cross-mixing of hot and cold water.

Handles: Forged brass four-arm handles with color-coded index discs.

Pre-Rinse Assembly: Self-closing squeeze valve with rubber-bound spray head, insulated handle and locking ring. Valve is mounted on spring loaded 39" stainless steel hose.

Inlet: 1-3/16" male shank with (2) 3/8" OD flexible copper tubes. Furnished complete with locknut and washer.


Quality Assurance: Pre-rinse unit is fully assembled and factory tested prior to shipment.

Additional Model

PR611 Same as above except for cold water only.

PR1711WSA

Pre-Rinse Unit, Panel Mounted

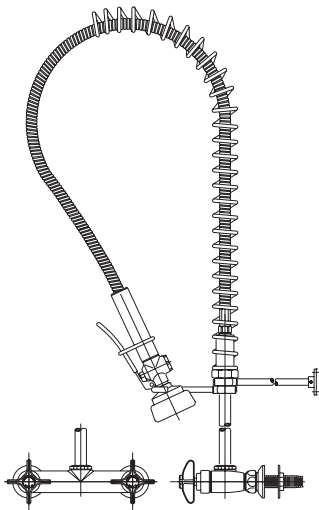

Application: Panel mounted pre-rinse unit for hot and cold water.

Body: Cast brass.

Valve Units: WaterSaver self-contained compression valve units with replaceable stainless steel seats and integral check valves. Check valves prevent cross-mixing of hot and cold water.

Handles: Forged brass four-arm handles with color-coded index discs.

Pre-Rinse Assembly: Self-closing squeeze valve with rubber-bound spray head, insulated handle and locking ring. Valve is mounted on spring loaded 39" stainless steel hose.


Inlet: Furnished with 3/8" IPS shanks (assembled), locknuts and washers. 3/8" NPT male union inlets.

Quality Assurance: Pre-rinse unit is fully assembled and factory tested prior to shipment.

Note: If mounting shanks are to be unassembled, use suffix "WS".

PR1020

Pre-Rinse Unit, Deck Mounted

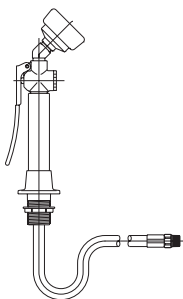

Application: Deck mounted pre-rinse spray unit. Unit may be connected directly to cold or tempered water supply or used with a foot-operated valve (see page 20).

Spray Head: Brass spray-type outlet head with rubber collar.

Valve: Forged brass self-closing squeeze valve with insulated handle.

Hose: 8 ft. reinforced PVC hose. 300 PSI maximum rated working pressure.

Mounting: Nylon deck flange for countertop mounting.

Inlet: 3/8" NPT male swivel-type inlet.

Quality Assurance: Pre-rinse unit is fully assembled and factory tested prior to shipment.

Additional Model

PR1020FSH Same as above except with 8 ft. stainless steel hose.

Options for Pre-Rinse Units:

Handles. 4" wrist blade handles in place of four-arm handles (add suffix "BH").

Vacuum Breaker. L110 in-line vacuum breaker installed on valve outlet (add suffix "110").